

## SET-UP INSTRUCTIONS



**Step 1:** Remove your RowHouse™ from the carry pack.

**CAUTION:** The RowHouse™ is spring-loaded. Keep away from face to prevent injury.



**Step 3:** After removing your RowHouse™, begin to unfold each of the three sections of your RowHouse™ by placing your hands at the top and unfold outwards. Continue to unfold the sections of your RowHouse™. Shown in photos 5, 6 & 7 (below)



**Step 4:** Fan open your RowHouse™ to resemble a triangle, and set into place on the ground. Unfold the skirting to prepare for the included ground stakes to secure your RowHouse™.

### RowHouse™ Parts List:

- 1 RowHouse™ GreenHouse  
(12" high x 24" wide x 12" deep)
- Ground Stakes
- Shade Cover
- Carry Pack