 
 



**1. To Set Program:**  
Insert ON and OFF trippers into dial slots at desired ON and OFF times.




**Do not insert trippers next to each other. Trippers must be pushed down firmly against dial surface.**



 **2. To set time of day:** turn dial clockwise with the arrow head pointed to the correct time.



 The dark area denotes PM and the white area denotes AM.



**3. Automatic Override Wheel:**  
Use the ON - OFF wheel at the top of the timer - turn wheel counter clockwise only in the direction of the arrows.



**1. Pour régler le programme:**  
Insérer les curseurs de programmation MARCHE et ARRÊT dans les fentes du cadran aux heures choisies pour mettre en marche et arrêter.


**Ne pas mettre les curseurs côte à côte. Les pousser fermement sur le cadran.**

**2. Pour régler l'heure:** Tourner dans le sens des aiguilles d'une montre, la flèche pointant vers l'heure exacte.


La partie foncée indique PM et la blanche AM.

**3. La roue de commande prioritaire automatique:**  
Utiliser la roue MARCHE-ARRÊT sur le haut de la minuterie - tourner la roue dans le sens contraire des aiguilles d'une montre uniquement dans la direction des flèches.


TN111

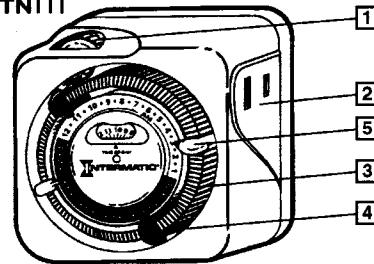

TN711

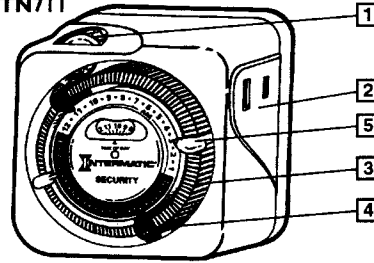

TN311

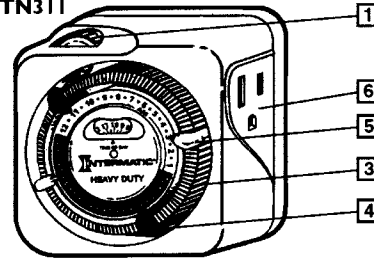

- 1. Automatic Override
- 2. 2-Prong Outlet
- 3. Time Dial
- 4. "OFF" Tripper (Red)
- 5. "ON" Tripper (Green)
- 6. Heavy-Duty Grounded Outlet